## **ADM230D Terminal Connections Auxiliary Contacts** Network **Network** Actuator 1 Actuator 2 Out In A brand of MAICO **POLARITY SENSITIVE** OUT2 **Main Power** Actuator 1 Actuator 2 Supply In (230v) Power Out (230v)

## Site Wiring (By Others):

To be used in conjunction with 'Typical ACP Panel Schematic Wiring (230V Actuators)', for full instructions.

## General:

Each ADM damper module must be connected to a 230V unswitched fused supply. ADM Damper Module Terminals will accept up to 2.5mm cables.

**Important:** Please ensure when using screwdrivers on terminal levers, not to use excessive force and ensure the screwdriver sits squarely on the lever tab. ADM's with damaged terminals **will not** be covered by warranty.